WC flush plate for Prevista Visign for Style 20

Product information Handling

Product information

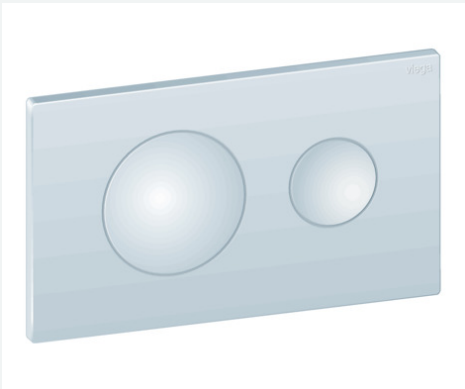

WC flush plate for Prevista Visign for Style 20

for all Prevista concealed cisterns

Baujahr (ab): 01.03.2019

PDF

WC flush plate for Prevista Visign for Style 20
Modellnr.: 8610.1 | Dateigröße: 4,3...

About these instructions for use

Standards and regulations

The following standards and regulations apply to Germany / Europe and are provided as a support feature.

Regulations from section: Technical data

Scope / Notice	Regulations applicable in Germany
Flush flow	DIN 3265
Noise class	DIN 4109

Intended use

Areas of use

Suitable cisterns

The flush plate is intended for the actuation of flushes on Viega concealed cisterns.

Installation is possible in all Prevista concealed cisterns.

Product description

Overview

Scope of delivery

1 installation frame
2 flush plate
3 actuating rods
4 retaining bolt

Technical data

Flush volume

The flush volumes for the flush actuation are:

- Small flush volume: approx. 2–4 litres
- Large flush volume: approx. 3.5–7.5 litres

For the setting of the flush see Setting the flush volume >.

Handling

Assembly

Prepare cistern

Requirements:

- The cistern is fitted into the pre-wall.
- The pre-wall is tiled.

Cut into the sticky tape of the shaft cover.

Remove the shaft cover.

Cut into the corners of the revision shaft.

Fold the sides of the revision shaft outwards up to the tile level and snap them off.

Mounting the flush plate

Turn the cover plate lock 90° in anti-clockwise direction.

Remove the cover plate.

Close the corner valve.

- Loosen the flexible hose at the filling valve.
- **INFO!**
  For setting the flush volume, see Setting the flush volume > .

- Open the corner valve for a few seconds to flush the pipe.

- Close the corner valve.

- Connect the flexible hose to the filling valve.

- Re-open the corner valve.
- **INFO!**
  Check the corner valve and the filling valve for leak tightness.

- Insert the cover plate into the cistern.

- Turn the cover plate lock by 90° in a clockwise direction.

Put on the installation frame.

Insert the retaining bolts.

Turn the retaining bolts by 90° in a clockwise direction.

Align the installation frame.

To fix the retaining bolts, turn safety rings in a clockwise direction.

INFO!
If you are not sure which cistern is installed, identify it by means of the following dimensions.

- 3H concealed cistern

- concealed cistern 3L

- Concealed cistern 3F

INFO!
For installation from the front into the concealed cisterns 3H, 3L, 3S.

Determine the distance for the actuating rods.

INFO!

Cistern 3H and 3L.

If necessary, cut the actuating rods to length.

- 0: 75–50 mm
- 1: 50–25 mm
- 2: 25–10 mm

INFO!

Cistern 3F.

If necessary, cut the actuating rods to length.

- 1: 75–55 mm
- 2: 55–35 mm
- 3: 35–15 mm
- 4: 15–10 mm

INFO!

For installation from above into concealed cistern 3L.

Determine the distance for the actuating rods.

If necessary, cut the actuating rods to length.

- 0: 60–45 mm
- 1: 45–25 mm
- 2: 25–10 mm

Insert the actuating rods as far as they will go.

Align the actuating rods.

Rotate the actuating rods 90° in clockwise direction.

Mount the flush plate.

→ The flush plate is mounted.

Commissioning

Setting the flush volume

Fold the tabs forward.

Lift the drain valve.

Remove the drain valve through the revision opening.

Set the large flush volume at the drain valve.

Set the small flush volume at the drain valve.

Errors, faults and remedy

Error	Cause	Remedy
The WC does not flush.	The cistern is not yet completely full.	Wait until the cistern is sufficiently full.
	There is no water in the cistern. The corner valve is closed.	Open the corner valve.
The WC flush runs through.	The seal at the filling valve is dirty or damaged.	Check the seal, replace if necessary.
	The seal at the drain valve is dirty or damaged.	Check the seal, replace if necessary.

Care and maintenance

Care tips

Use normal soap or a mild cleaning agent for regular care and prevention of lime scale on the flush plate. Under no circumstances should scouring agent or scratching objects be used.

Strong stains can be removed using typical household cleaner. Rinse the detergent thoroughly with clear water after the prescribed exposure time. There should be no residue on the components.

Disposal

Separate the product and packaging materials (e. g. paper, metal, plastic or non-ferrous metals) and dispose of in accordance with valid national legal requirements.