
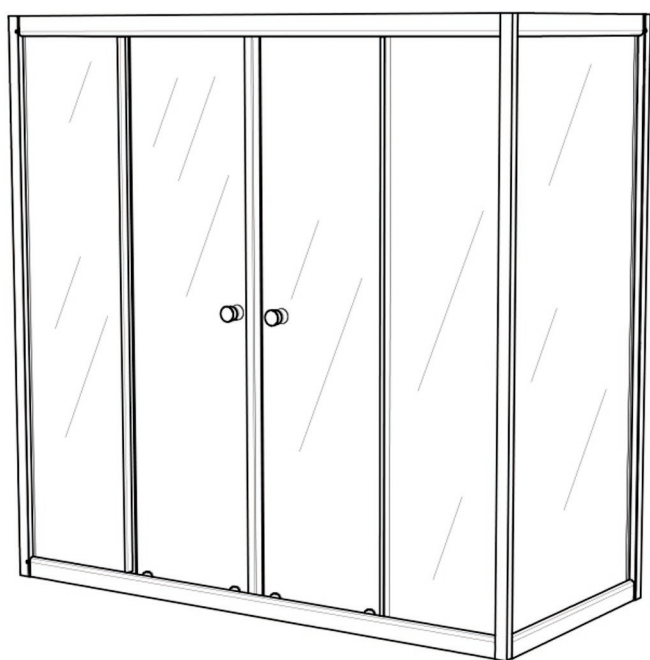
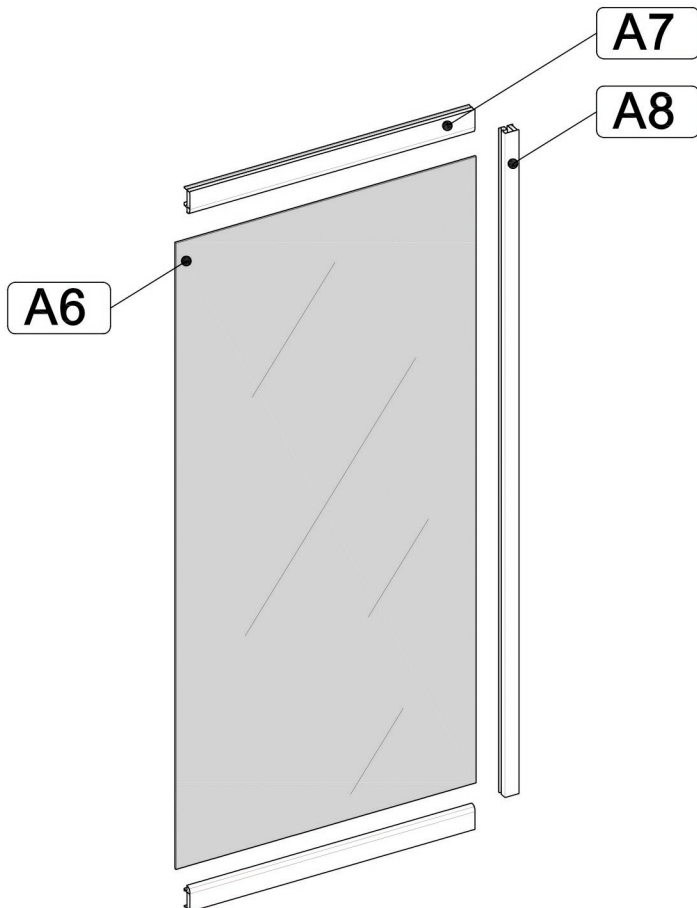









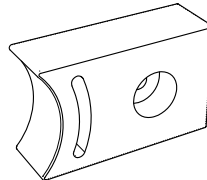

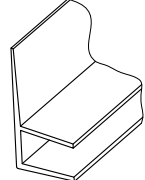




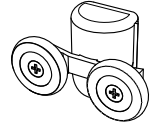



Инструкция по сборке

ШТОРА ДЛЯ ВАННЫ

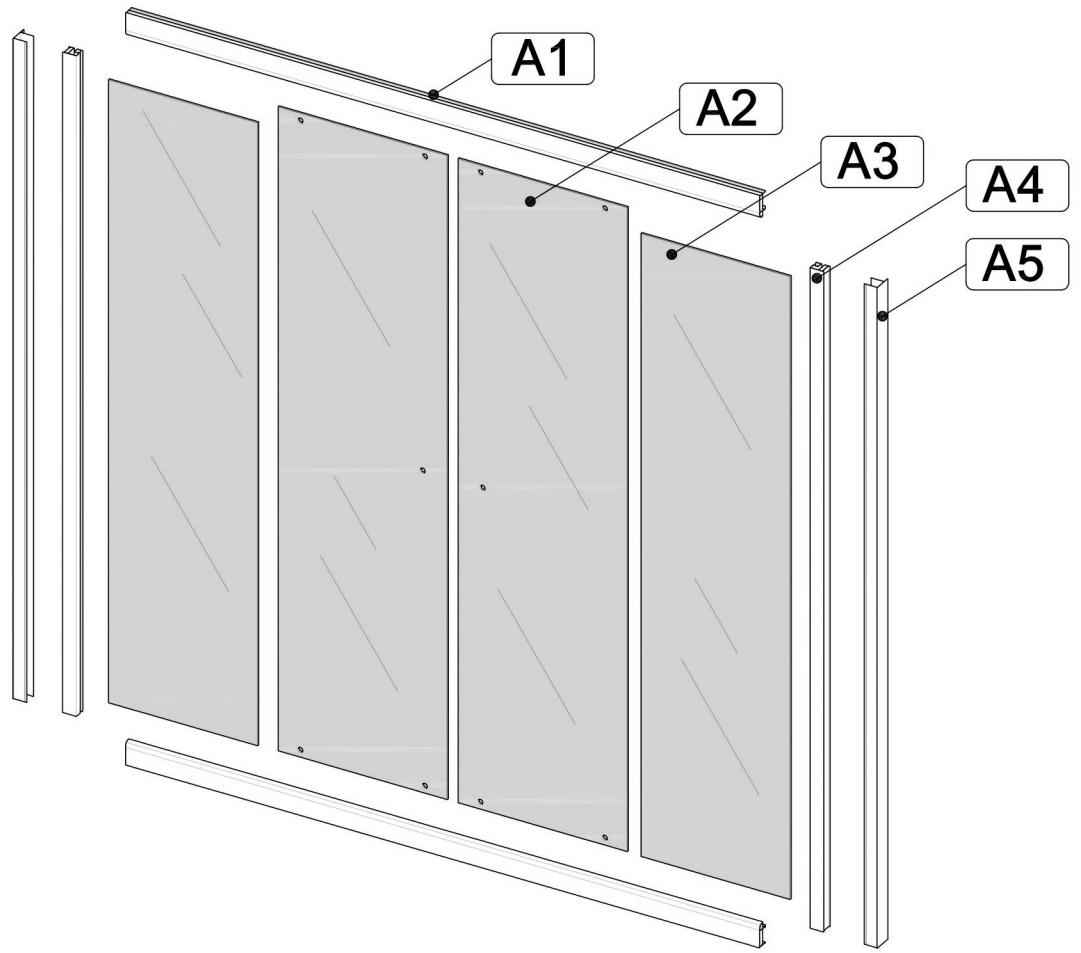


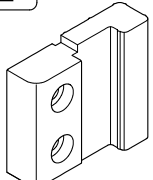

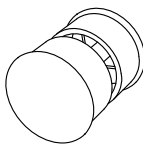B1 	B2 	B3 	B4 3.5x16 	B5 3.5x12 
B6 3.5x50 	B7 6x50 	B8 	B9 	B10 
B11 	B12 	B13 	B14 	B15 


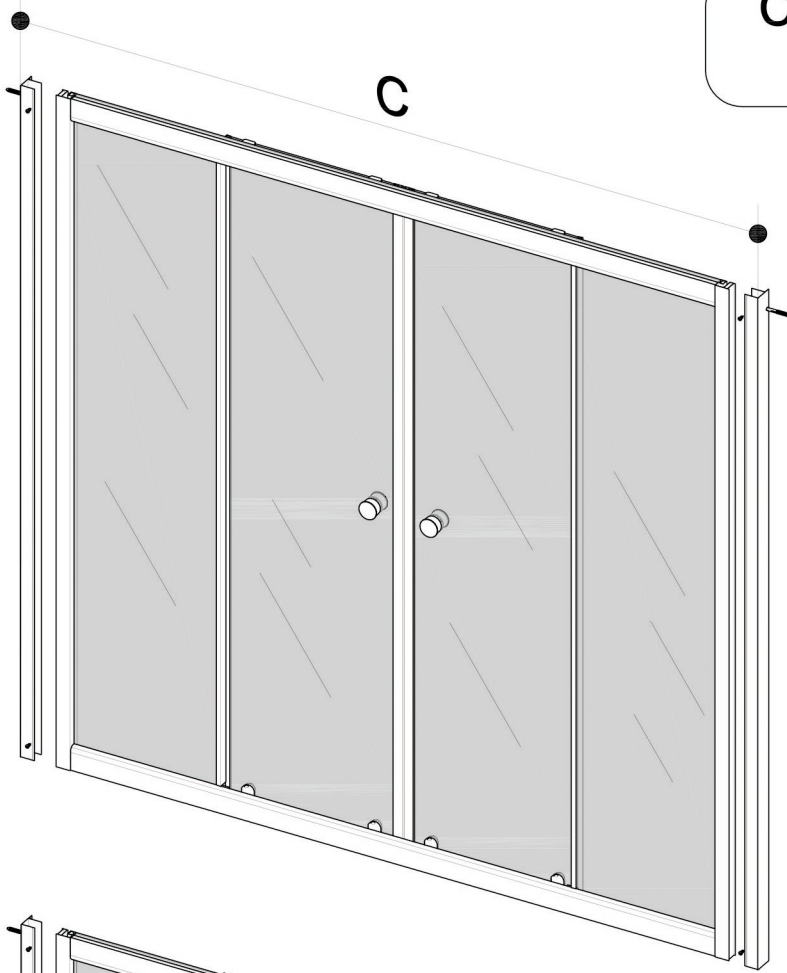


C=1480 ÷ 1500 MM
1680 ÷ 1700 MM

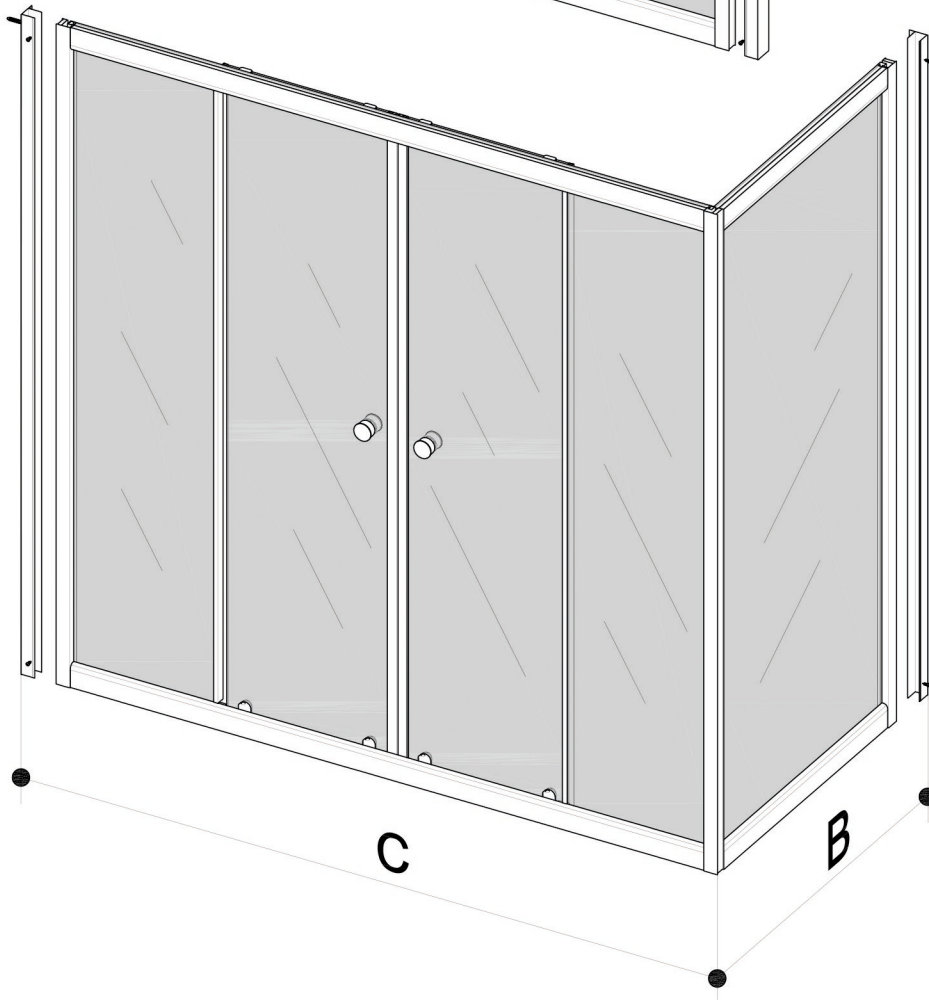


C=1485 ÷ 1495 MM
1685 ÷ 1695 MM


B=690 ÷ 700 MM

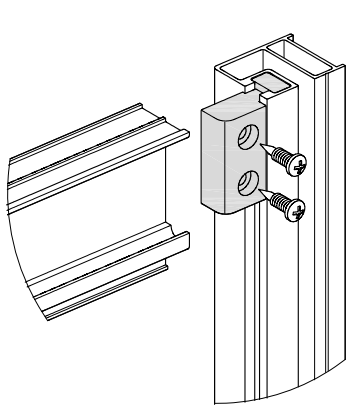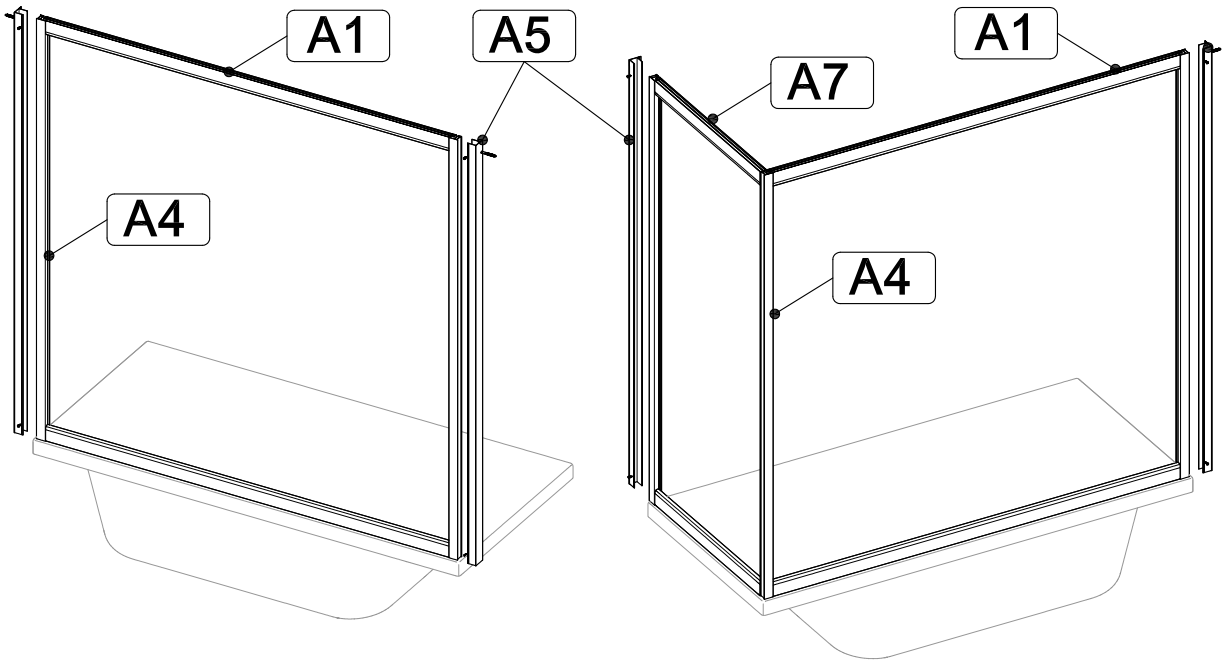




B1
B4

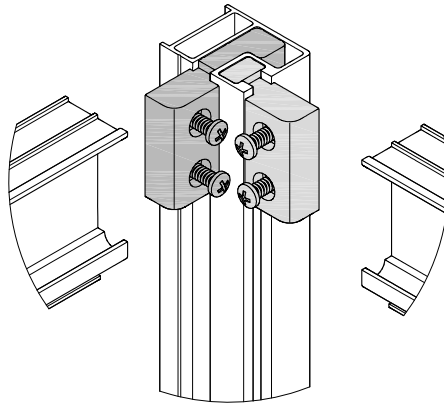


B1
B2
B4

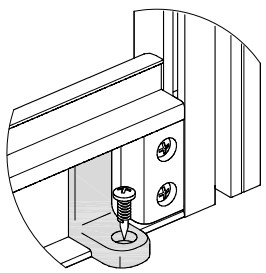






B3
B4

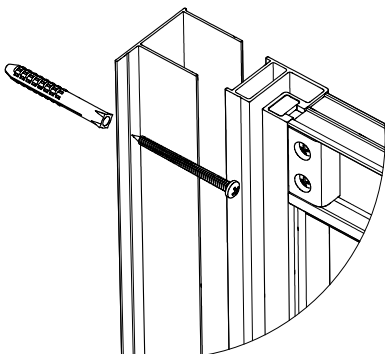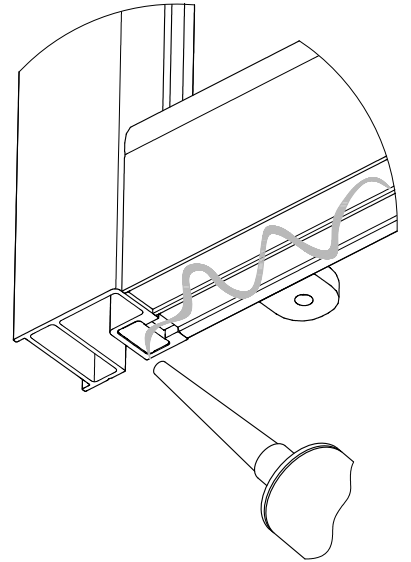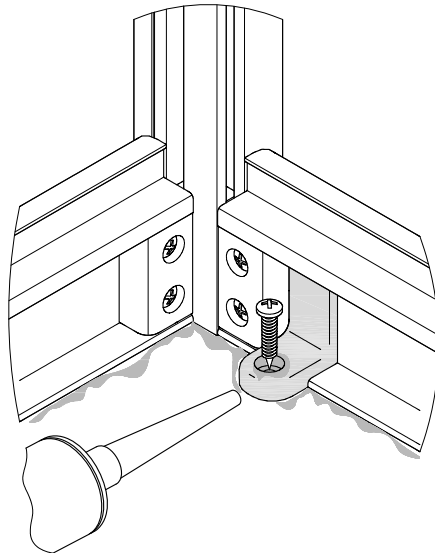

B6
B7

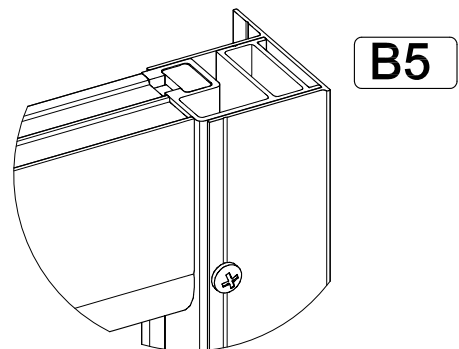


B5

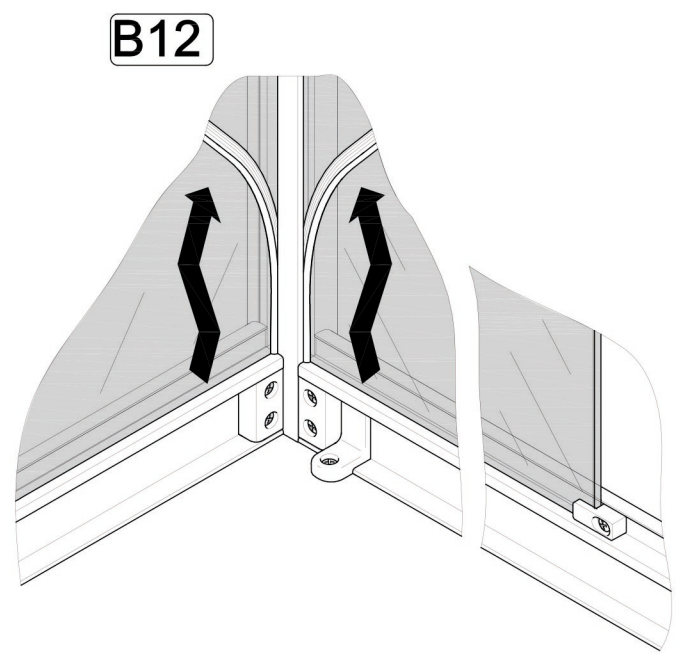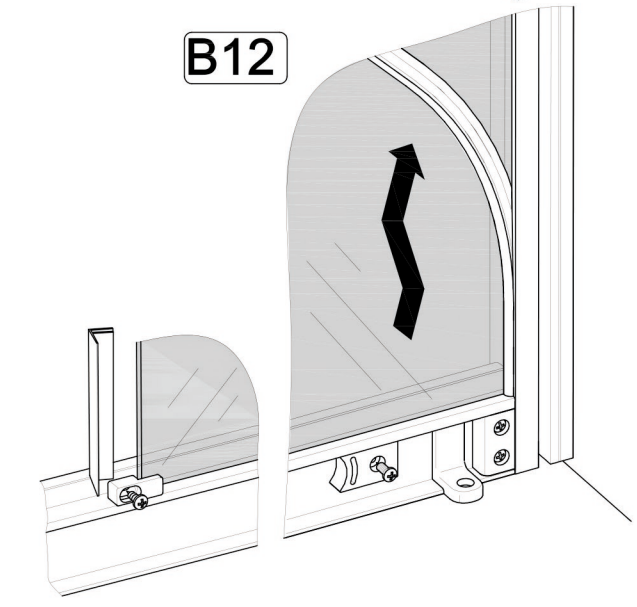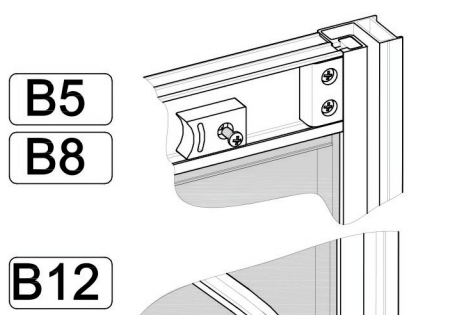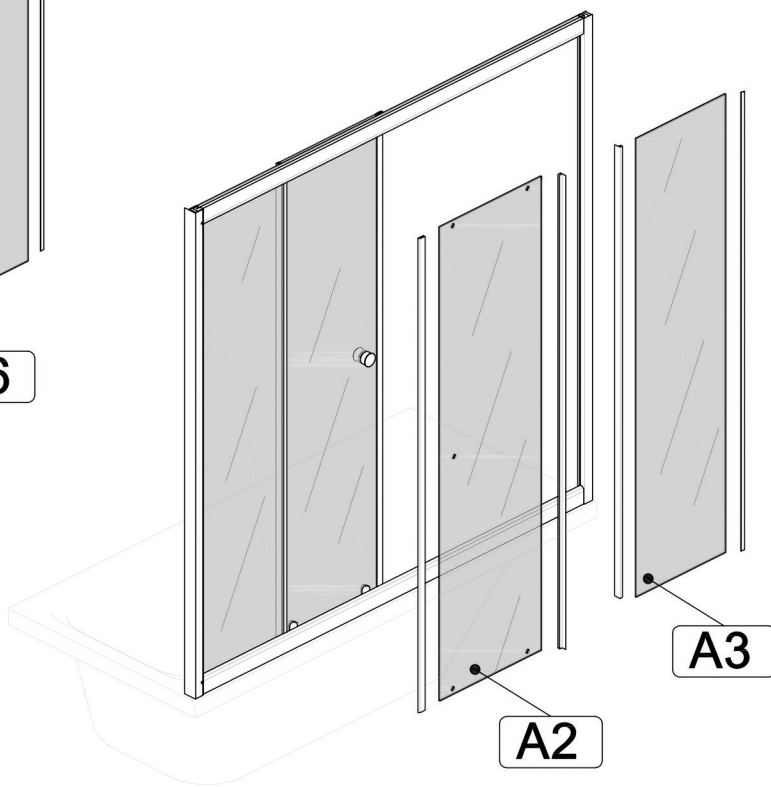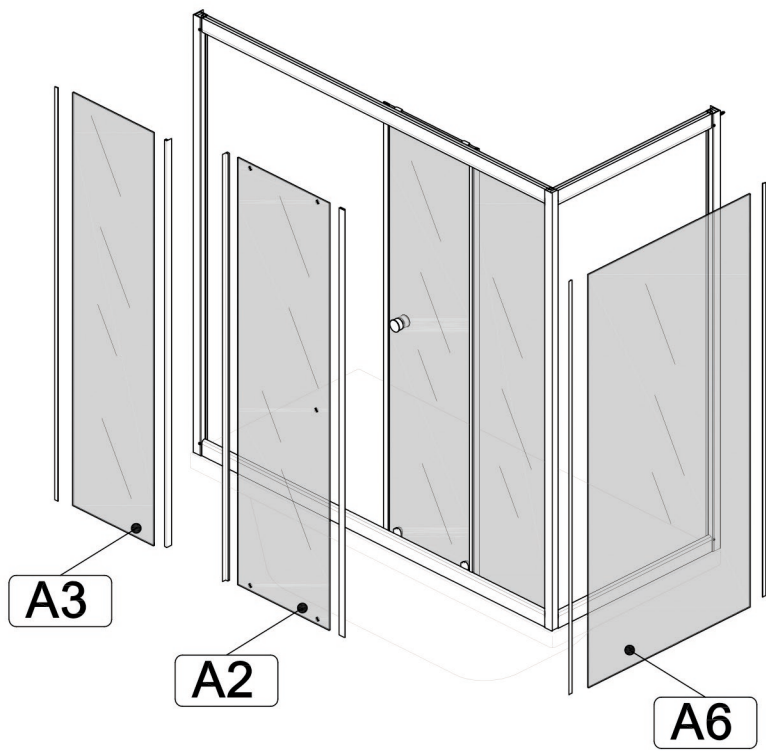


B5
B9
B10 ✂ L=1370

B10 ✂ L=1439

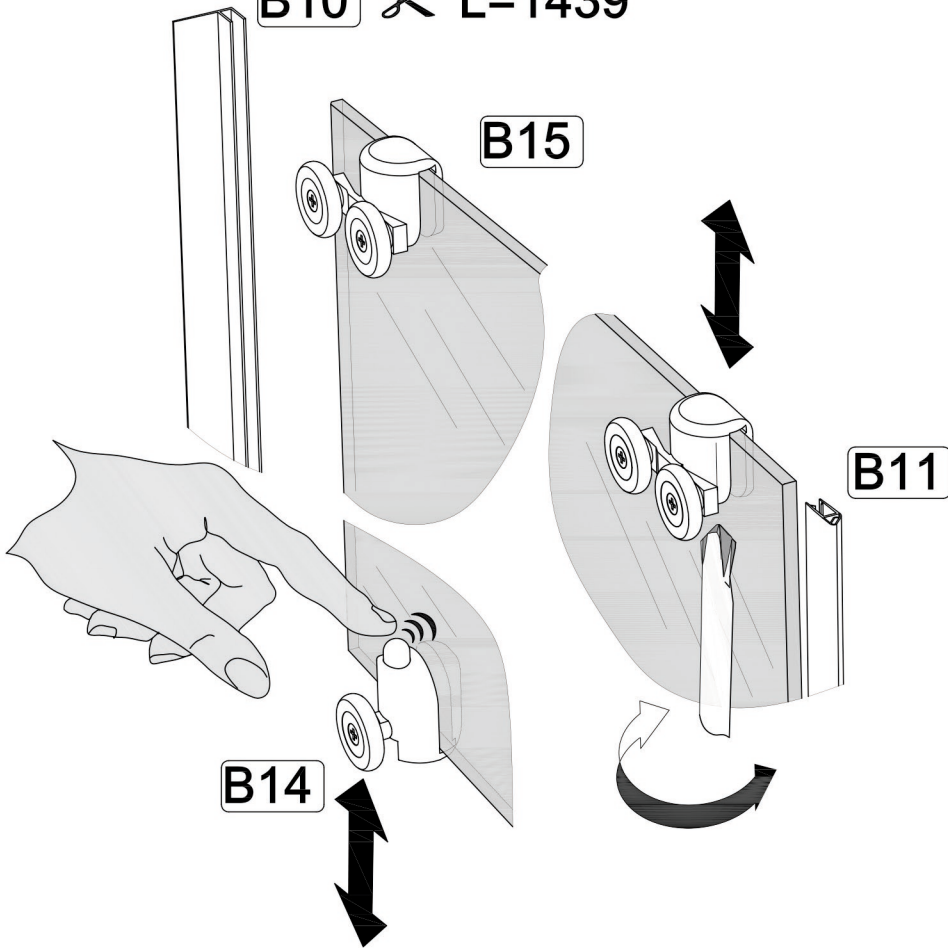


B5 = = **B5**
B8 • • • **B8**

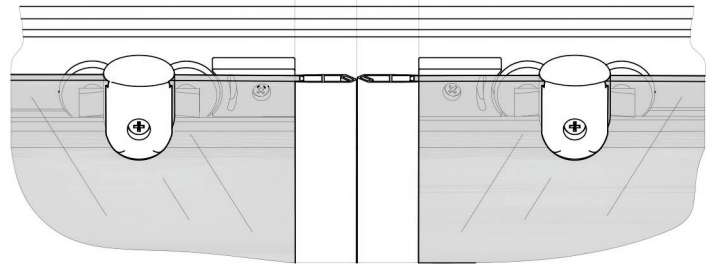

A2

B13

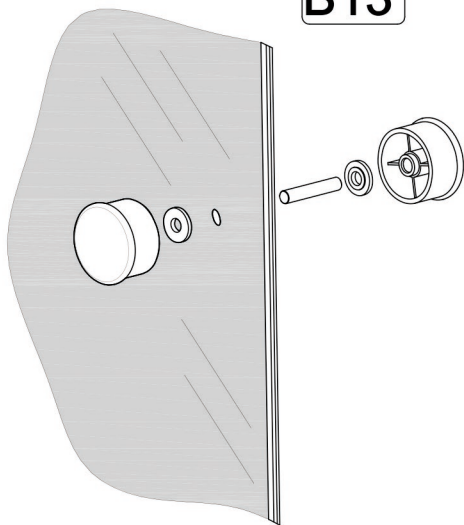

www.3tn.ru