


Prevista Dry fixing set universal

Product information Handling

Product information

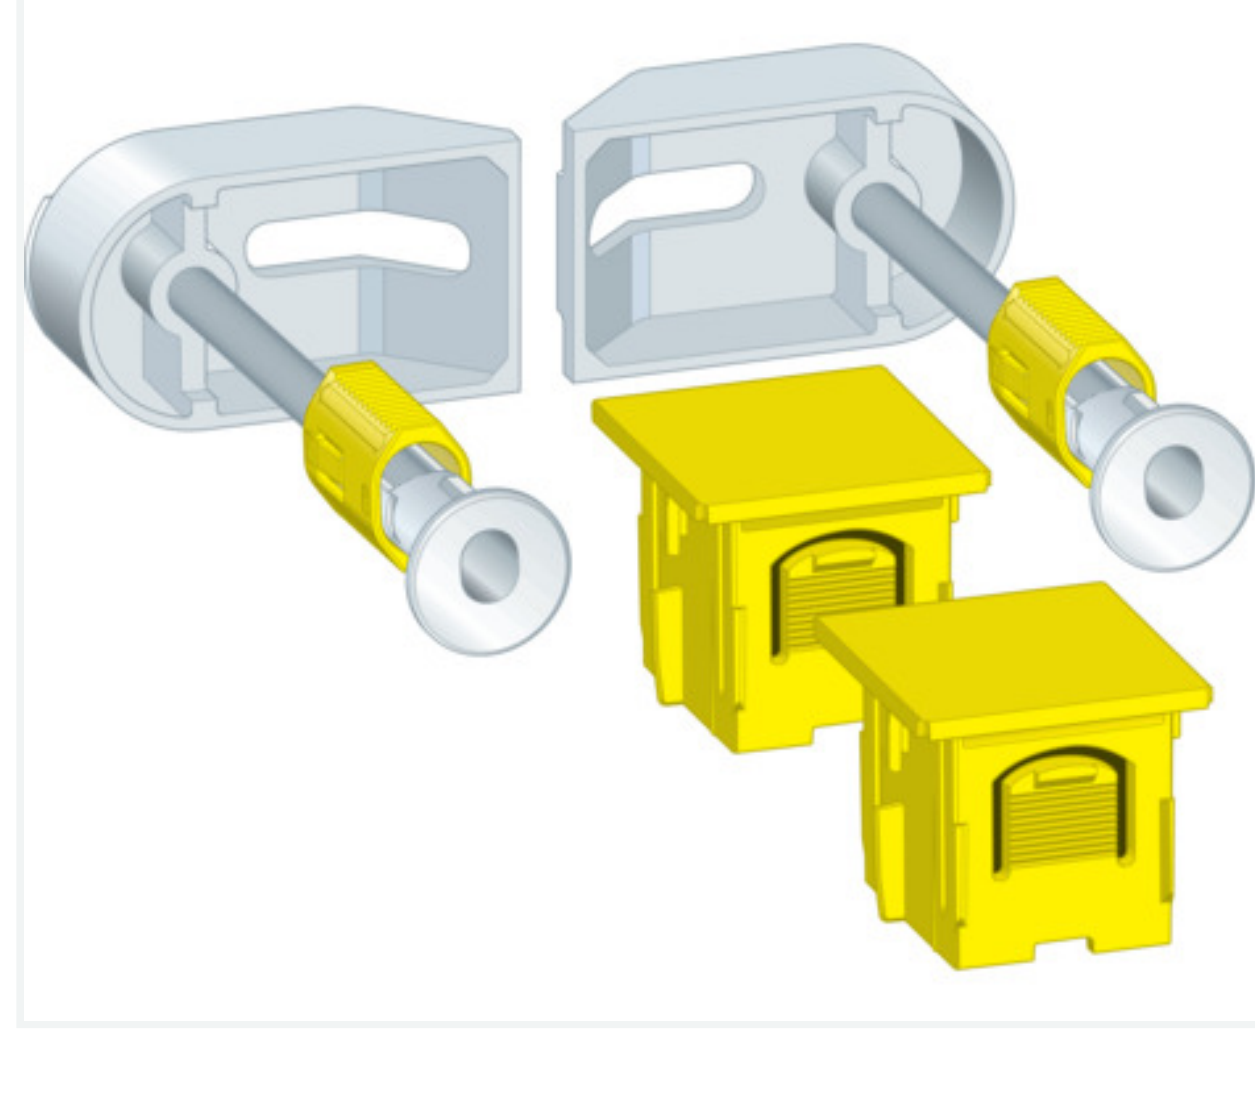

Prevista Dry fixing set universal

for fixing the Viega Prevista Dry elements in single / line mounting, single mounting directly onto the installation body or corner mounting on masonry or metal support profile.

Baujahr (ab): 01.09.2018

PDF

Prevista Dry fixing set universal
Modellnr.: 8570.36 | Dateigröße: 1.1...

► About these instructions for use

Standards and regulations

The following standards and regulations apply to Germany / Europe and are provided as a support feature.

Regulations from section: Fields of application / Mounting conditions

Scope / Notice	Regulations applicable in Germany
Suitable masonry walls	EN 1996-1-1
Suitable concreted walls	DIN 1045


Intended use

Areas of use

The Prevista Dry fixing set is used for mounting Prevista Dry elements onto the wall construction pursuant to the regulation in section [Regulations from section: Fields of application / Mounting conditions](#).

Product description

Overview

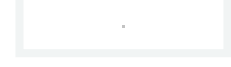


Components

- 1 wall bracket
- 2 Cap
- 3 Slide
- 4 Mounting bracket
- 5 Dowels and screws for wall mounting

Handling

Assembly

Mounting the fixing set

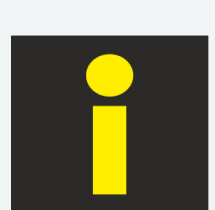

INFO!

Mount the elements as shown by way of example of the Prevista Dry WC element with shower WC connection and variable ceramic height (model 8521).

- Determine and mark the fixing points.

- X1: depending on the element used.
- X2: depending on the element used.

- Drill the holes.
- Insert the dowels.
- Mount the mounting bracket.

- Align and fix the mounting brackets (size 13).

- Loosen the feet of the element using a fork spanner (size 13).

- Adjust the construction height of the element in accordance with the on-site marking of the upper edge of the finished floor.
- Tighten the feet of the element using a fork spanner (size 13).

- Align the depth of the element.

- X4: depending on the element used.
- Mark the fixing points on the floor.

- Remove the element and drill the floor holes.
- Insert the dowels.

- Fix the element in the floor.

- Push the mounting bracket through the element on the threaded rods.

- Align the element and use the slide to attach the mounting bracket to the threaded rods.

- Loosely insert the caps.

INFO!
Do not press on the caps to engage them.

- Re-adjust the alignment of the element using the threaded rods.

- Push the caps down until they engage.

Disposal

Separate the product and packaging materials (e. g. paper, metal, plastic or non-ferrous metals) and dispose of in accordance with valid national legal requirements.