

BCH 40 T Brushcutter



Документы

Engine

Starter assy and clutch


Tank and air filter

Transmission

Transmission D.28 mm





Carburetor

Head Tap&Go D.130

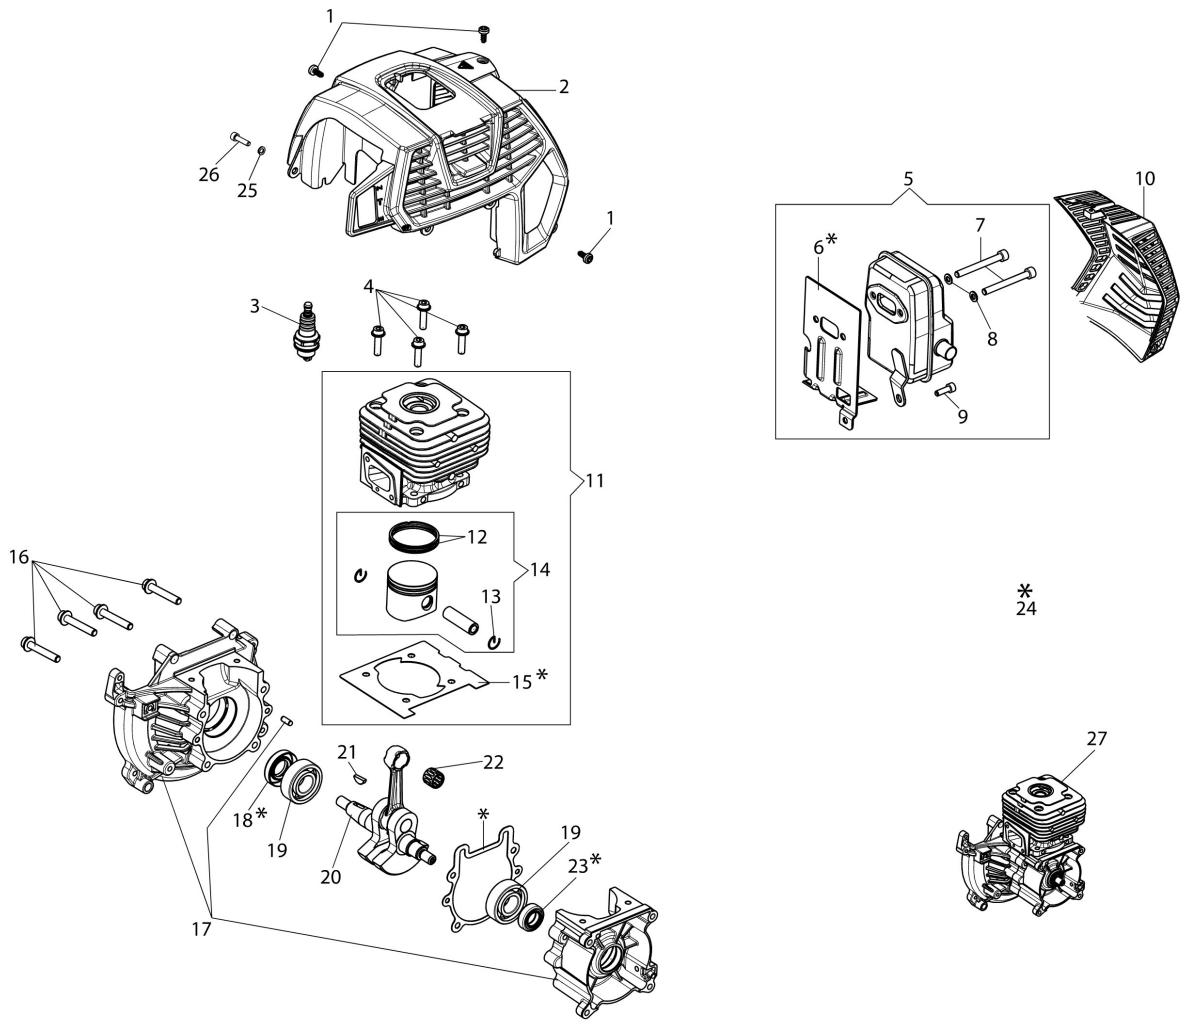


изображение Engine

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	3	3960121R	Screw				
2	1	61452028R	Engine cover				
3	1	3055104R	Spark plug				
4	4	3860095R	Screw				
5	1	61450206R	Muffler assy				
6	1	61450242AR	Gasket				
7	2	3801065R	Screw				
8	2	3916006R	Washer				
9	1	3801011R	Screw				
10	1	61450367R	Muffler cover				
11	1	61450048	Complete cylinder		SN 8210038436		BT3-144-03/20
11	1	61450048	Complete cylinder	SN 8210038437			BT3-144-03/20
12	2	61450014R	Piston ring				
13	2	61450013R	Ring				
14	1	61450187R	Piston assy				
15	1	61450127AR	Gasket				
16	4	3860096R	Screw				
17	1	61452001BR	Crankcase assy				
18	1	3050056R	Oil seal				
19	2	3035065R	Bearing				
20	1	61450001AR	Crankshaft				
21	1	3028020R	Key				
22	1	50110044R	Bearing				
23	1	3050057R	Oil seal				
24	1	61450443	Gasket set				
25	2	3801009R	Screw				
26	2	3916005R	Washer				
27	1	61450039R	Short block				

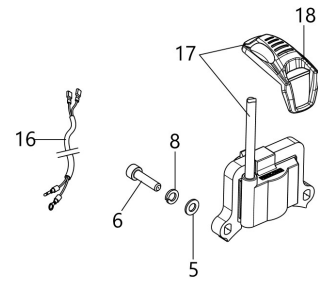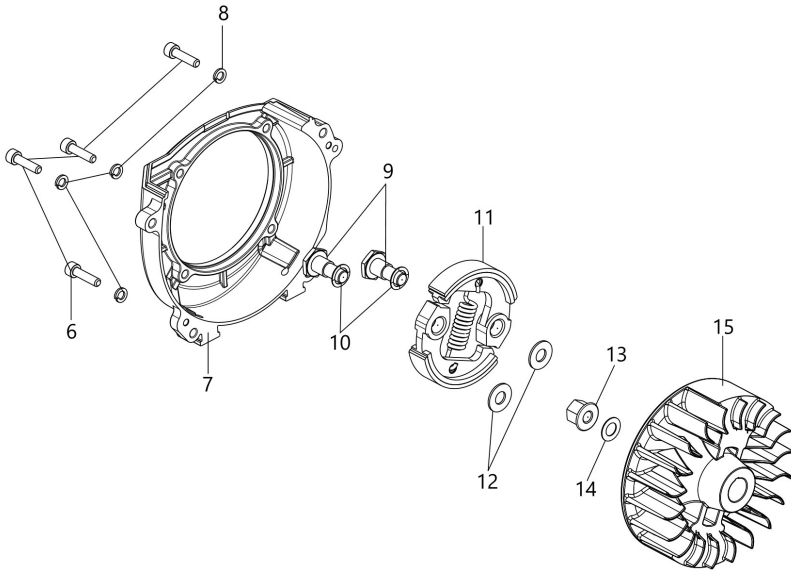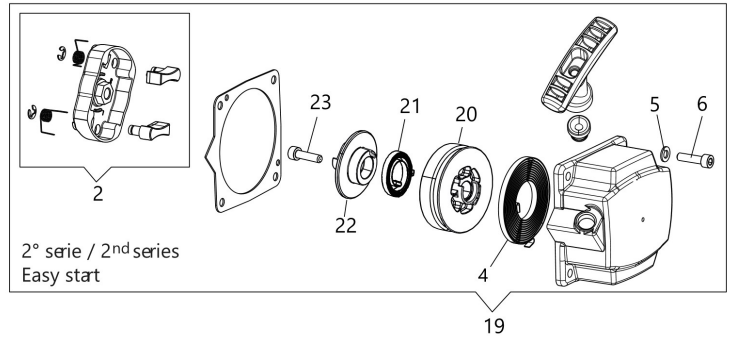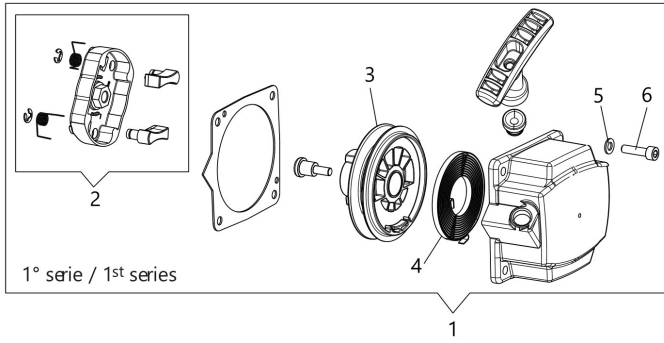


изображение Starter assy and clutch

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	61450192R	Starter assy		Dicembre 2020/ December 2020		BT3-152-05/21
2	1	61450193AR	Clutch driver				
3	1	61450229AR	Starter pulley				
4	1	61450044AR	Starter spring				
5	6	3916005R	Washer				
6	10	3801013R	Screw				
7	1	61452083R	Flange				
8	6	3819006R	Washer				
9	2	61450070R	Pin				
10	2	61450072R	Washer				
11	1	61450277R	Clutch				
12	2	61450071R	Washer				
13	1	50010148R	Nut				
14	1	3833080R	Washer				
15	1	61450310R	Flywheel				
16	1	BF000030R	Cable				
17	1	2501026BR	Ignition coil				
18	1	61450370R	Spark plug cap				
19	1	61460066	Easy-on starter assembly	Gennaio 2021 / January 2021			BT3-152-05/21
20	1	61450024R	Starter pulley				
21	1	61450496R	Spring				
22	1	61450025R	Sprocket				
23	1	3801009R	Screw				

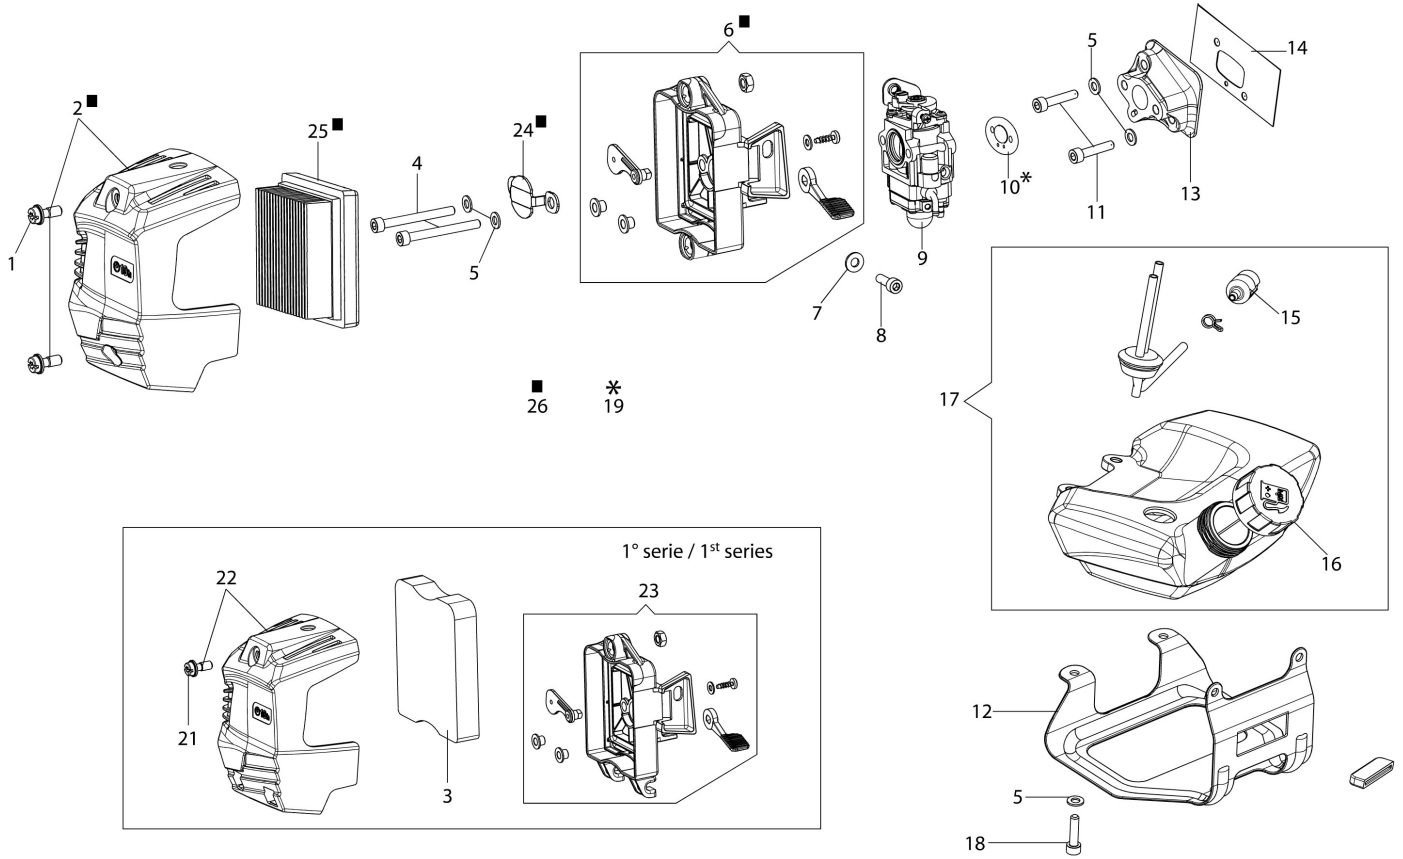


изображение Tank and air filter

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	2	61330040AR	Screw	SN 8229132537 - SN			BT3-143-10/19
2	1	61450045	Air filter cover	8219149742 SN 8229132537 - SN		Per modelli premodifica da	BT3-143-10/19
3	1	61450061R	Air filter		SN 8210038436		BT3-144-03/20
4	2	3801012R	Screw			to be matched	
5	4	3916005R	Washer				
6	1	61450047	Air filter support	SN 8229132537 - SN		Per modelli premodifica da	BT3-143-10/19
7	1	3918010R	Washer				
8	1	3801011R	Screw			to be matched	
9	1	2318624R	Carburetor				
10	1	61450054AR	Gasket				
11	2	3801015R	Screw				
12	1	61450082R	Tank shield				
13	1	61450053AR	Insulator				
14	1	61450052AR	Gasket				
15	1	094600450R	Fuel filter				
16	1	BF000024R	Tank cap				
17	1	61452050R	Tank assy				
18	2	3801013R	Screw				
19	1	61450443	Gasket set				
21	1	61330040AR	Screw		SN 8229132536 - SN		BT3-143-10/19,
22	1	61450444	Air filter cover		SN 8229132536 - SN		BT3-143-10/19,
23	1	61450445	Air filter support		8219149741 SN 8229132536 - SN		BT3-144-03/20 BT3-143-10/19,
24	1	61450016R	Plate	SN 8210038437			BT3-144-03/20
25	1	61450425R	Air filter	SN 8210038437			BT3-144-03/20
26	1	61450049	Air filter kit				BT3-144-03/20

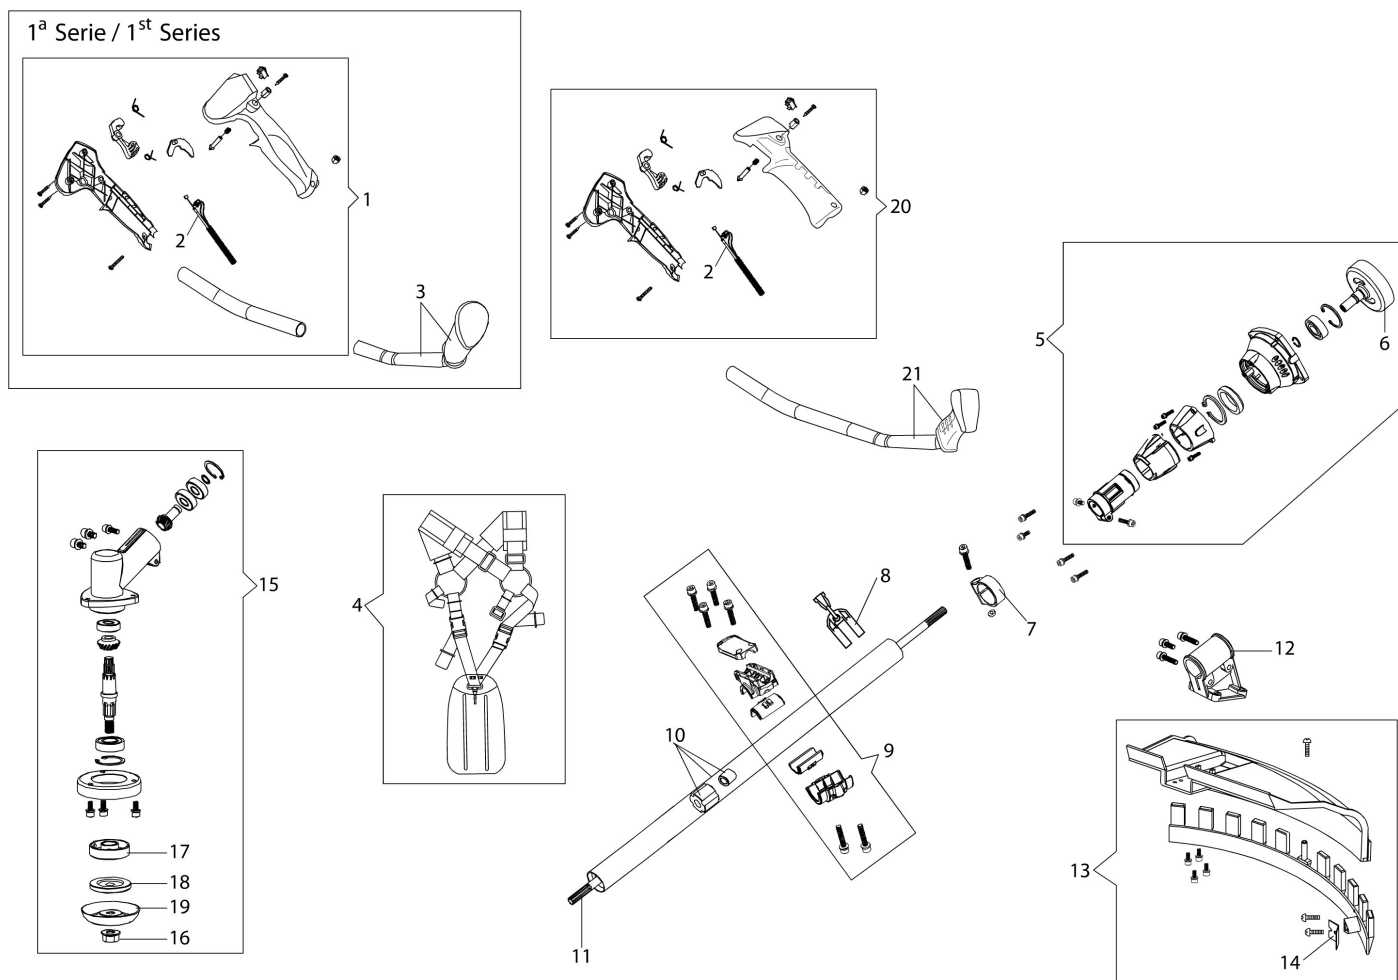


изображение Transmission

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	BF000059R	Complete handle		Agosto 2020 / August 2020		BT3-148-09/20
2	1	BF000016R	Throttle cable				
3	1	BF000022R	Handle and knob		Agosto 2020 / August 2020		BT3-148-09/20
4	1	BF000020R	Harness				
5	1	61450327R	Starter case				
6	1	BF000011R	Clutch drum				
7	1	BF000012R	Band				
8	1	BF000013R	Support				
9	1	61450328R	Complete clamp				
10	1	BF000014R	Tube Ø26				
11	1	BF000015R	Drive shaft				
12	1	BF000008R	Bracket				
13	1	BF000029R	Guard kit				
14	1	BF000009R	Blade				
15	1	61450441R	Bevel gear				
16	1	BF000007R	Nut				
17	1	BF000037R	Hub				
18	1	BF000038R	Flange				
19	1	BF000036R	Safety ring				
20	1	BF000059R	Complete handle	Settembre 2020 /			BT3-148-09/20
21	1	BF000058R	Handle and knob	Settembre 2020 / September 2020			BT3-148-09/20

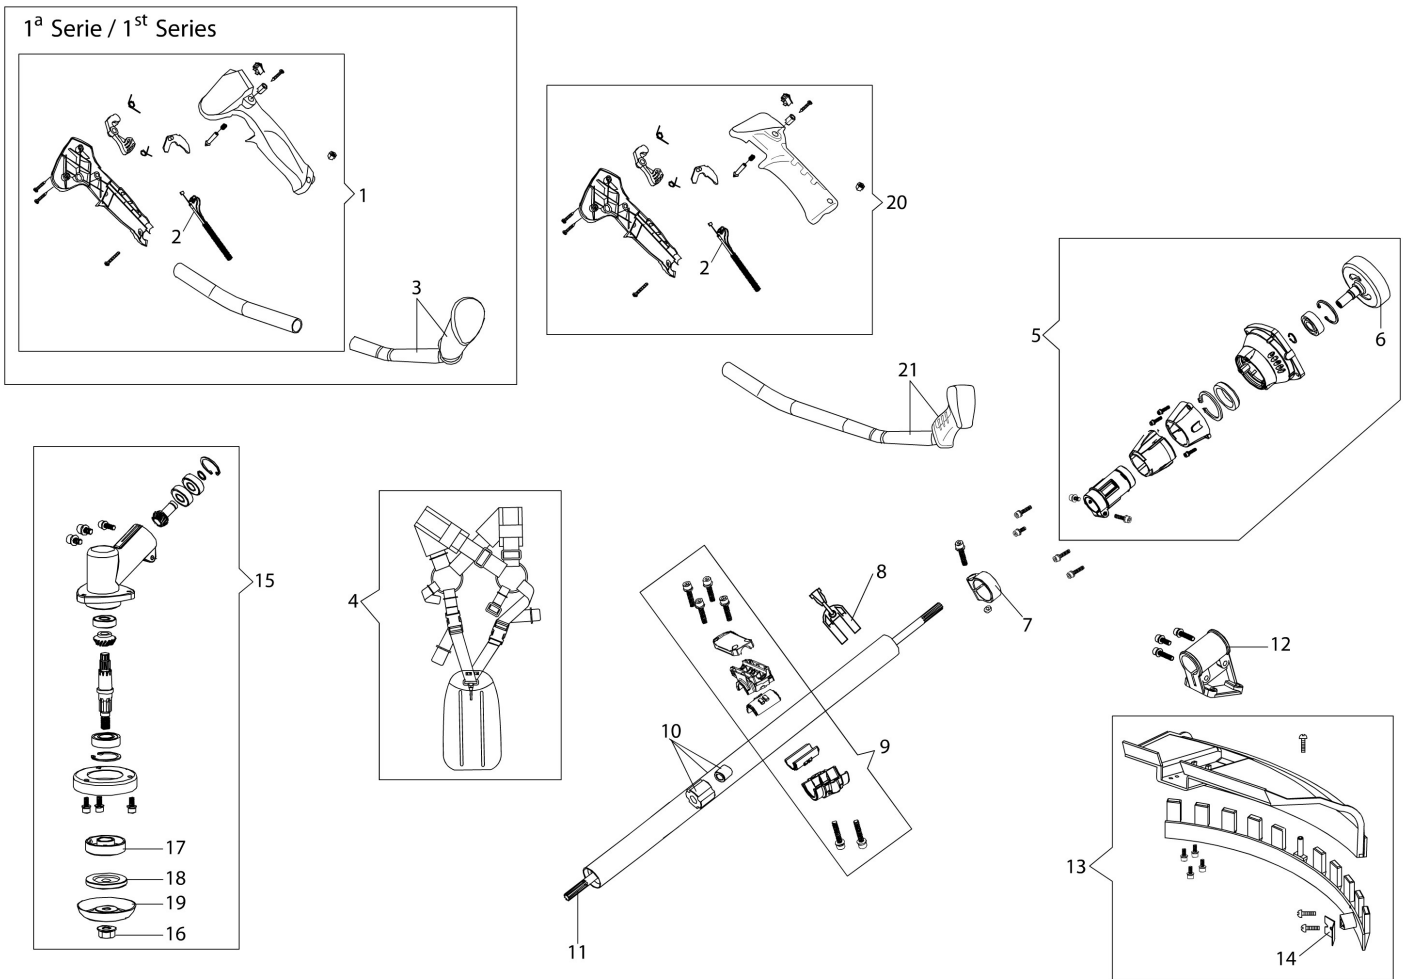


изображение Transmission D.28 mm

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	BF000059R	Complete handle		Agosto 2020 / August 2020		BT3-148-09/20
2	1	BF000016R	Throttle cable				
3	1	BF000022R	Handle and knob		Agosto 2020 / August 2020		BT3-148-09/20
4	1	BF000020R	Harness				
5	1	BF000045R	Starter case				
6	1	BF000011R	Clutch drum				
7	1	BF000041R	Band				
8	1	BF000042R	Support				
9	1	BF000046R	Complete clamp				
10	1	BF000043R	Tube Ø28				
11	1	BF000015R	Drive shaft				
12	1	BF000040R	Bracket				
13	1	BF000029R	Guard kit				
14	1	BF000009R	Blade				
15	1	BF000044R	Bevel gear Ø28				
16	1	BF000007R	Nut				
17	1	BF000037R	Hub				
18	1	BF000038R	Flange				
19	1	BF000036R	Safety ring				
20	1	BF000059R	Complete handle	Settembre 2020 /			BT3-148-09/20
21	1	BF000058R	Handle and knob	Settembre 2020 / September 2020			BT3-148-09/20

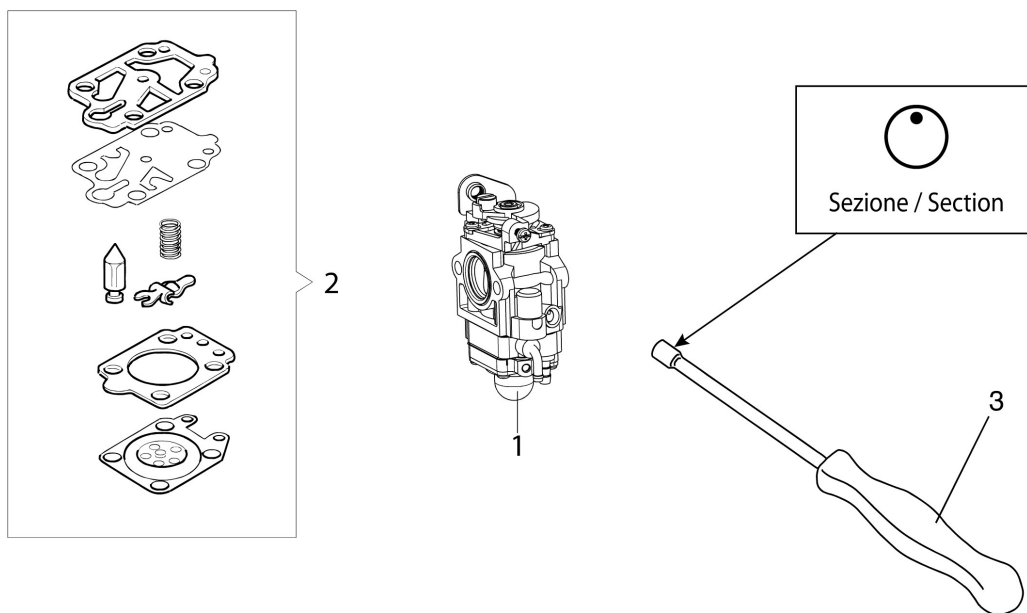

изображение Carburetor

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	2318624R	Carburetor				
2	1	2318025R	Repair kit				
3	1	3055155R	Special screwdriver				

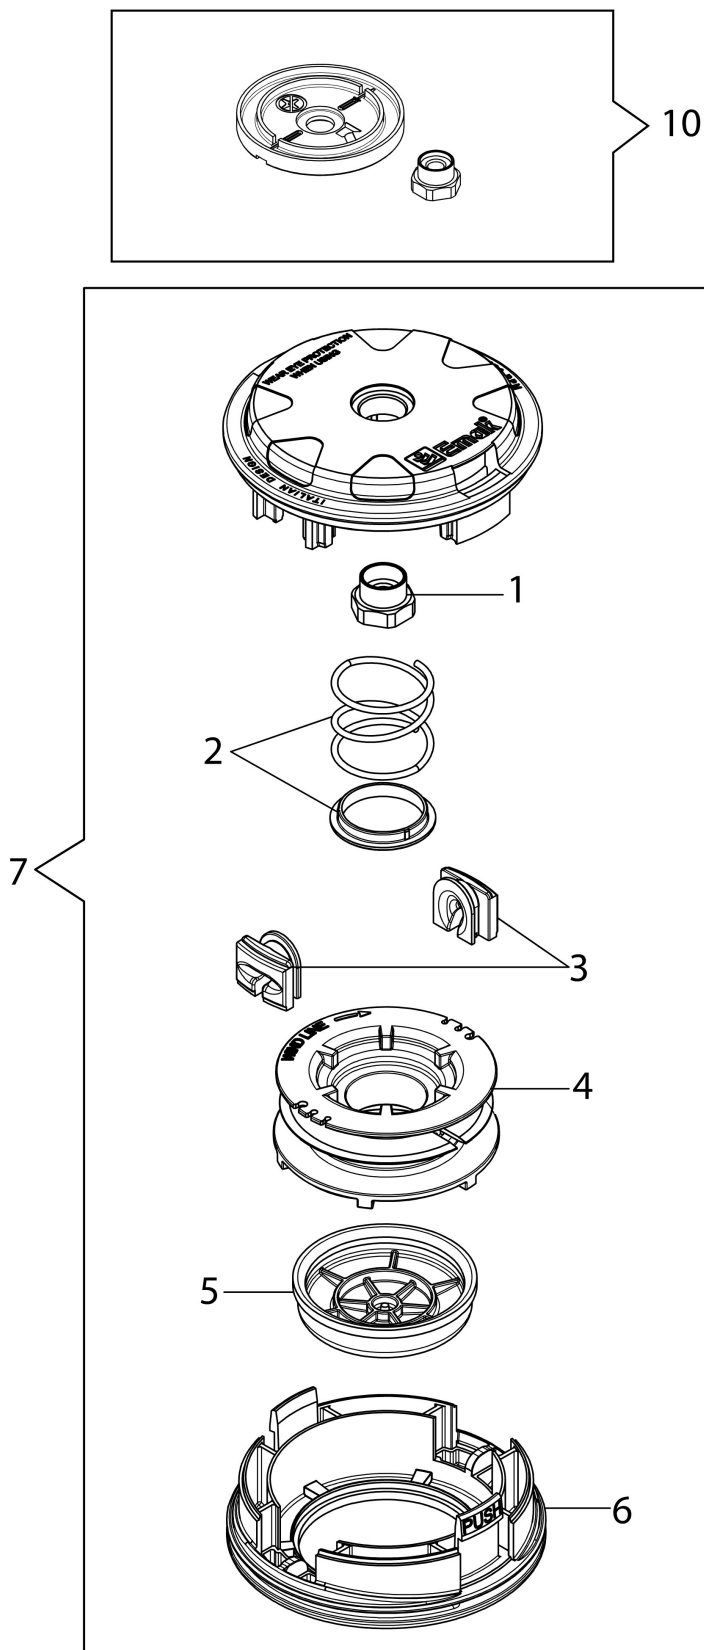

изображение Head Tap&Go D.130

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	63120040R	Nut				
2	1	63120031R	Kit spring				
3	2	63120001R	Bushing				
4	1	63120010R	Nylon spool				
5	1	63120011R	Knob kit				
6	1	63120012R	Lower cover				
7	1	61459100	Complete nylon head Ø 2,4				
7	1	61459102	Complete nylon head Ø 3				
10	1	61460055	Guard kit				